


SCOSCHE®

FMC1370B

IN-DASH INSTALLATION KIT FOR 1999-00 MERCURY COUGAR/ 2000-03 FORD FOCUS

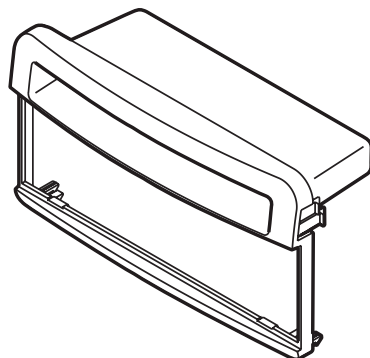

FACTORY WIRING CODES

For Factory Wiring Codes go to: www.scosche-cars.com or Call

INTRODUCTION

Thank you for purchasing the Scosche FMC1370 installation panel. This installation kit was manufactured with the highest of quality standards.

STEREO INSTALLATION

1. Insert DIN Removal Tools to release Factory Stereo, unplug all electrical connectors, and remove radio.

2000-03 Ford Focus 1999-00 Mercury Cougar

STEREO INSTALLATION:

1. Snap the kit panel securely into the dash opening.
2. See Illustration "A" for kit assembly with DIN.
3. Connecting the stereo to the factory wiring as directed in the stereo's owners manual. Scosche recommends the use of an FD02 connector set when connecting to the factory wiring. The FD02 connector will plug into the wiring in the vehicle and eliminate the need to cut and splice into the factory wiring.

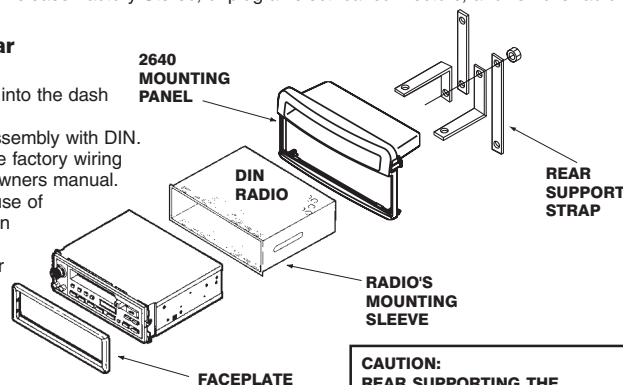


ILLUSTRATION "A"
DIN RADIO

CAUTION:
REAR SUPPORTING THE
RADIO ADDS TO THE
INSTALLATION'S STRUCTURAL
INTEGRITY. (REAR SUPPORT
STRAPS ARE NOT SUPPLIED)

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (FMC1370) in 1999-00 Mercury Cougar/2000-03 Ford Focus vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call

©2004 SCOSCHE INDUSTRIES, INC.


TECH HELP 1-800-621-3695, ext. 3

SI 1/04 - FMC1370 (3000368)

SCOSCHE®

FMC1370B

IN-DASH INSTALLATION KIT FOR 1999-00 MERCURY COUGAR/ 2000-03 FORD FOCUS

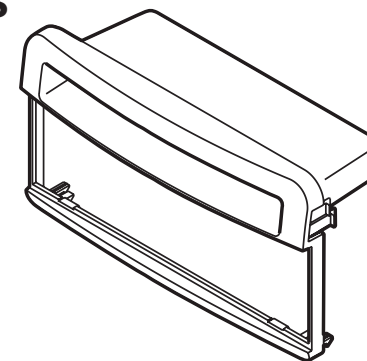

FACTORY WIRING CODES

For Factory Wiring Codes go to: www.scosche-cars.com or Call

INTRODUCTION

Thank you for purchasing the Scosche FMC1370 installation panel. This installation kit was manufactured with the highest of quality standards.

STEREO INSTALLATION

1. Insert DIN Removal Tools to release Factory Stereo, unplug all electrical connectors, and remove radio.

2000-03 Ford Focus 1999-00 Mercury Cougar

STEREO INSTALLATION:

1. Snap the kit panel securely into the dash opening.
2. See Illustration "A" for kit assembly with DIN.
3. Connecting the stereo to the factory wiring as directed in the stereo's owners manual. Scosche recommends the use of an FD02 connector set when connecting to the factory wiring. The FD02 connector will plug into the wiring in the vehicle and eliminate the need to cut and splice into the factory wiring.

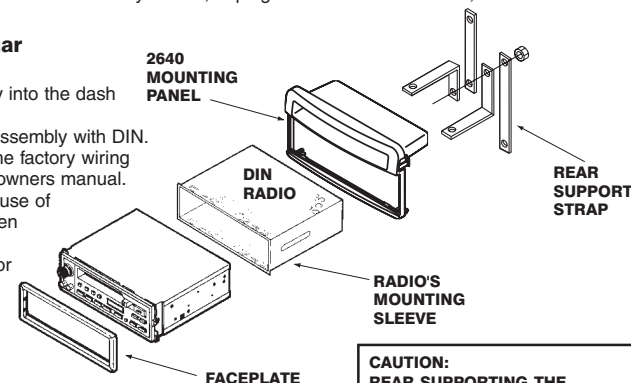


ILLUSTRATION "A"
DIN RADIO

CAUTION:
REAR SUPPORTING THE
RADIO ADDS TO THE
INSTALLATION'S STRUCTURAL
INTEGRITY. (REAR SUPPORT
STRAPS ARE NOT SUPPLIED)

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (FMC1370) in 1999-00 Mercury Cougar/2000-03 Ford Focus vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call

©2004 SCOSCHE INDUSTRIES, INC.

TECH HELP 1-800-621-3695, ext. 3

SI 1/04 - FMC1370 (3000368)